

# RG4-DRYER INSTALL INSTRUCTIONS 27" AND 38"



**Roof Goose Vent** LLC  
SUPERIOR VENT TERMINATIONS

Roofgoosevent.com

P: 401-522-9857

## Parts Included



### Step 1

Install Duct Riser Clamp (#4) Requires #8x3/4" Screws Field Supplied Plumb & Level



### Step 2

Verify Duct Is 38"-39" Above Roof Membrane Or 27"-28" Depending On Sleeve Length



### Step 7

Lace 6" S.S. Hose Clamp (#5) Through Rectangular Slots at Base of Sleeve (#1). Tighten Until Sleeve Is Firmly in Position

### Step 7 "Front" Close Up



### Step 3

For Temporary Water Protection Caulk Opening Around Duct



### Step 5

Slide Optional Insulation (#2) Over Duct



### Step 6

Slide Included Sleeve (#1) Over Duct Till Fully Engaged with Bushing



### Step 6 Close Up

Sleeve Fully Engaged In Bushing

### Step 4

Slide (1) Of The Included Bushings (#7) To The Base Of The Duct, Secure As Shown With Provided 4" S.S. Hose Clamp (#6) And Secure (4) 6" Screws (#8) To Roof Deck. \*Take Caution To Not Over Tighten The Screws\* If Underlying Duct Has Been Flashed Already 6" Screws Are Not Used.



### Step 7 "Side" Close Up



SEE BACK FOR FURTHER INSTRUCTIONS

# RG4-DRYER INSTALL INSTRUCTIONS

## 27" AND 38"



**Roof Goose Vent**<sup>LLC</sup>  
SUPERIOR VENT TERMINATIONS

Roofgoosevent.com

P: 401-522-9857

### Step 8

Place (1) Of The Included Bushings (#7) On The Open End Of The Termination, Align Notches On Bushing With Locks On Tube



### Step 9

Roofers Flashing Will Adhere To Sleeve (#1)




### Step 10

Slide Rain Collar (#3) Down Sleeve Until It Covers Roofers Flashing (A Shimmy Motion Helps If Its Tight)



### Step 11

Screw Provided Bird Guard (#10) On To Gooseneck (#9) In A Clockwise Motion

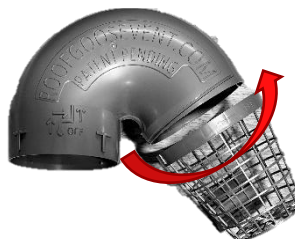

### Step 12

Install Gooseneck (#9) With A Down, Clockwise, Down Motion Until Lock Fully Engaged At All 4 Points (See Steps 12.1-12.3 For Guidance)



### Step 12.1

Align Internal Pegs Of Neck To Channels On Top Of The Sleeve Then Push Down



### Step 12.2

After Step 12.1 Twist The Neck In A Clockwise Motion



### Step 12.3

After Step 12.2 Push the Neck Down Until Lock Fully Engaged At All 4 Points

