

RG4-IE & RG6-IE INSTALL INSTRUCTIONS FOR BEFORE AND AFTER ROOF FLASHING 27" AND 38"




Roof Goose Vent^{LLC}
SUPERIOR VENT TERMINATIONS

Roofgoosevent.com

P: 401-522-9857

Parts Included

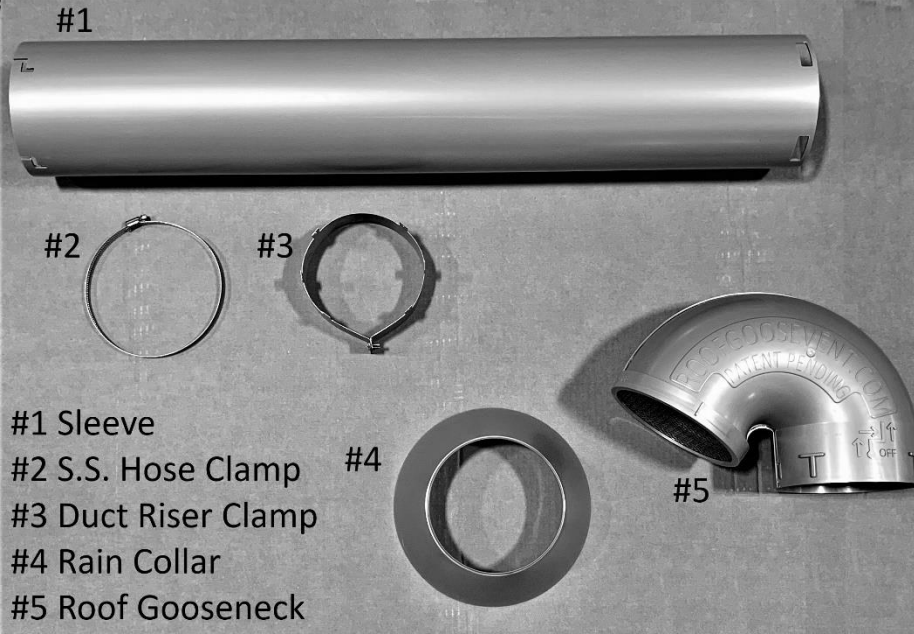

Step 1

Install Duct Riser
Clamp (#3)
Requires #8x3/4"
Screws Field
Supplied Plumb &
Level



Step 2

Verify Duct Is
38"-39" Above
Roof Membrane
Or 27"-28"
Depending On
Sleeve Length



Step 3 A

For Temporary Water
Protection Caulk Opening
Around Duct



Step 3 A Continued

If The Metal Duct Has Been
Flashed Previously This
Step Can Be Skipped All
Following Steps Remain
The Same



Step 3 B

Slide Included Sleeve (#1)
Over Duct



Step 4

Lace S.S. Hose Clamp (#2)
Through Rectangular Slots
at Base of Sleeve (#1).
Tighten Until Sleeve Is
Firmly in Position



Step 4 "Front" Close Up



Step 4 "Side" Close Up



SEE BACK FOR
FURTHER
INSTRUCTIONS

RG4-IE & RG6-IE INSTALL INSTRUCTIONS FOR BEFORE AND AFTER ROOF FLASHING 27" AND 38"



RoofGooseVent^{LLC}
SUPERIOR VENT TERMINATIONS

Roofgoosevent.com

P: 401-522-9857

Step 5

Roofers Flashing Will Adhere To Sleeve (#1)



Step 6

Slide Rain Collar Down Sleeve Until It Covers Roofers Flashing (A Shimmy Motion Helps If Its Tight)




Step 7

Install Gooseneck (#5) With A Down, Clockwise, Down Motion Until Lock Fully Engaged At All 4 Points (See Steps 7.1 – 7.3 For Guidance)



Step 7.1

Align Internal Pegs Of Neck To Channels On Top Of The Sleeve Then Push Down

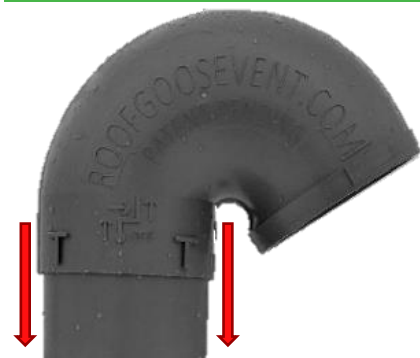

Step 7.2

After Step 7.1 Twist The Neck In A Clockwise Motion



Step 7.3

After Step 7.2 Push the Neck Down Until Lock Fully Engaged At All 4 Points

